


Power On Remote Display

1. Install the battery pack or connect to a DC power source.
2. Connect antenna.
3. Press **Execute** for two seconds; display enters the **Remote Mode** locating screen.
4. Press the Down arrow to access the Main menu.

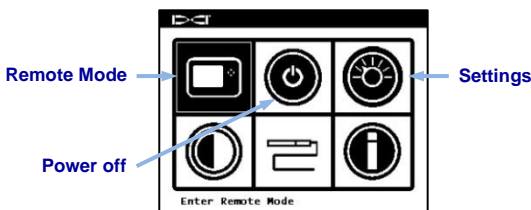

Remote Display Main Menu



Use the arrow buttons to highlight menu options and **Execute** to select. Use the **Remote Mode** locating screen during drilling.

Settings


Use the **Settings** menu to set the following items:

- Telemetry channel
- Receiver model
- Telemetry frequency designation
- Depth units
- Pitch units

DCI recommends setting the units (m, degrees) to match those on the receiver.


Remote Mode Locating Screen

This screen shows the data the transmitter (Tx) is sending to the receiver.

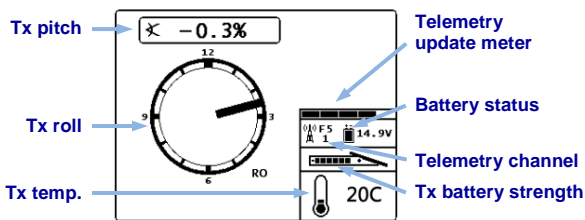

Target Steering

When Target Steering® mode is activated on the receiver, the FSD screen changes automatically to show depth and distance data for the steering target. Refer to your FSD operator's manual for important details on how to steer the indicator to the target.

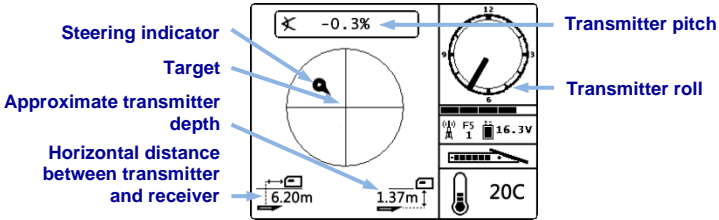

For detailed information, see the FSD Operator's Manual, available at www.DigiTrak.com. If you have questions, contact your regional DCI office or U.S. Customer Service at 1.425.251.0559 or 1.800.288.3610 US/CAN.

Watch our DigiTrak® Training Videos at
www.youtube.com/dcikent